
How to Use the Dishwasher

Smeg dishwasher. The buttons are on the top edge of the door, so you can only see them with the door open. There is no Start button. **Closing the door starts the wash.**

> **The rule that matters most:** Use the dishwasher tabs we provide. **Never use hand dish soap.** It makes too much foam and can affect how the machine runs.

Run a load

Press Power, choose a wash, then close the door

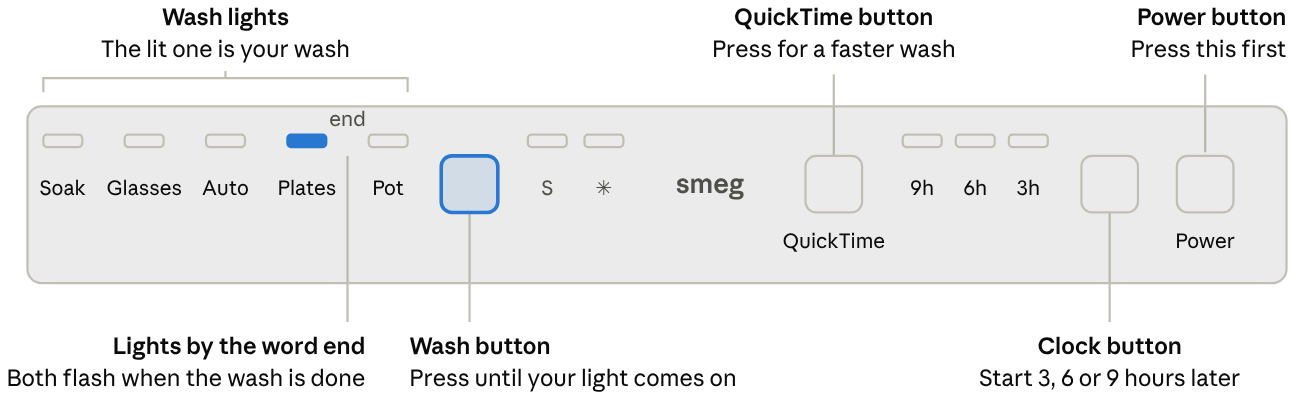

Dishwasher control panel, seen from above with the door open. The panel shows pictures where this drawing shows words.

1. **Load the dishes.** Scrape off food, but there is no need to rinse.
2. **Add one tab.** Open the door and find the detergent cup on the inside of the door, on the left. Press its button to open it, drop in one small tab, and snap it shut. Use one tab per load. Tabs are [location].
3. **Turn it on.** Press the **power button** at the far right of the panel.
4. **Choose a wash.** Press the **square button to the right of the five symbols** until the fourth light comes on for Daily Wash, our recommended wash. The chart below shows the other options.
5. **Close the door firmly.** The wash starts in about 2 seconds, and the light flashes while it runs.

Which wash to choose

We recommend Daily Wash for almost every load. Its light is the fourth from the left, as shown in the drawing above. The other washes are there if you need them.

Press the wash button until the wash lights match the chart. ● means lit and ○ means off, reading the five lights from left to right.

For this load	Choose	Wash lights
Recommended for most loads	Daily Wash (recommended)	○ ○ ○ ● ○
Lightly dirty dishes, washed right after use	Rapid (27 minutes)	● ○ ○ ○ ○ + QuickTime button
Normal dishes, sooner	Normal Quick	○ ○ ○ ● ○ + QuickTime button
Dirty pots and pans	Pots	○ ○ ○ ○ ●
Wine glasses and delicate items	Crystal	○ ● ○ ○ ○
Delicate items, sooner	Delicate Quick	○ ● ○ ○ ○ + QuickTime button
Mixed load, let the machine decide	Auto Delicate (can take about 3 hours)	○ ○ ● ○ ○
Waiting to fill the machine later	Soak (cold rinse, about 15 minutes, no tab)	● ○ ○ ○ ○

To add QuickTime: After choosing your wash light, press the **QuickTime button**, the first square button to the right of the Smeg logo. Then close the door.

When it finishes

1. Listen for a short beep. The two lights marked **end** will flash.
2. Wait about 20 minutes so the dishes can cool.
3. Empty the **bottom rack first** so drips do not land on clean dishes.
4. Press the **power button** to turn it off.

Loading tips

- **Bottom rack:** Plates, pots and pans.
- **Top rack:** Glasses, cups, small plates and bowls.
- **Cups, bowls and pots:** Place them face down.
- **Knives and wooden-handled tools:** Please keep these out of the dishwasher and wash them by hand.
- **Before you close the door:** Make sure the spray arms can spin freely.

Please hand-wash: All knives, wooden-handled kitchen tools, the air fryer's round metal pan and insert, other wood items, copper, brass, silver, aluminum, handmade pieces and anything not marked dishwasher safe.

Need to change something?

I want to...	Do this
Add a dish mid-wash	Open the door carefully. Wait about 1 minute before closing it, and the wash picks up where it stopped.
Switch to another wash	Open the door, choose the new wash and close the door.
Cancel the wash	Open the door. Hold the wash button for a few seconds until both **end** lights come on, then close the door. It finishes in about 1 minute.
Start it later	Choose your wash, then press the **clock button** to pick 3, 6 or 9 hours and close the door. It does a short prewash first, then waits.

If something goes wrong

Problem	Try this
It will not start	Close the door firmly and check that the power is on.

Problem	Try this
Lights are blinking in an unusual pattern	Open and close the door, then set the wash again. If it happens again, contact your host.
Water stays in the bottom	Check the filter in the bottom of the tub for food. If water remains, contact your host.
Dishes are not clean	Check that you added one tab, how the dishes are loaded and that the spray arms can spin. If you used Rapid, try Daily Wash, because a tab may not fully dissolve on a short wash.
Water is leaking	Turn the machine off and contact your host right away.

You do not need to refill the salt or rinse aid. We take care of those. If you see a warning light for them, you can still run your wash.